



# Laying Clamp Pro

## Owner's Manual



### **WARNING:**

*Please read carefully and understand these ASSEMBLY AND OPERATION INSTRUCTIONS before operating for the first time. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury and/or affect your warranty.*

Model – CL1

SAVE THESE INSTRUCTIONS FOR REFERENCE

**Thank you very much for choosing an LES product!**

For future reference, please complete the owner's record below:

Model & Serial Number: \_\_\_\_\_

Purchase Date: \_\_\_\_\_


Save the receipt, warranty, and this manual. It is important that you read the entire manual to become familiar with this product before you begin using it.

This Laying Clamp Pro has been designed for certain applications only. LES is not responsible for issues arising from modification or improper use of this product such as an application for which it was not designed. We strongly recommend that this product not be modified and/or used for any application other than that for which it was designed.

For technical questions, please call 01384 567 430.

## 1. Technical Parameters

Parameter	Value
Clamping Range	560 – 1100 mm
Maximum Load Capacity	300 kg
Material	Galvanized steel
Handles	Ergonomic, non-slip grips
Additional Feature	Central lifting hook for mechanical assistance
Weight	11 kg

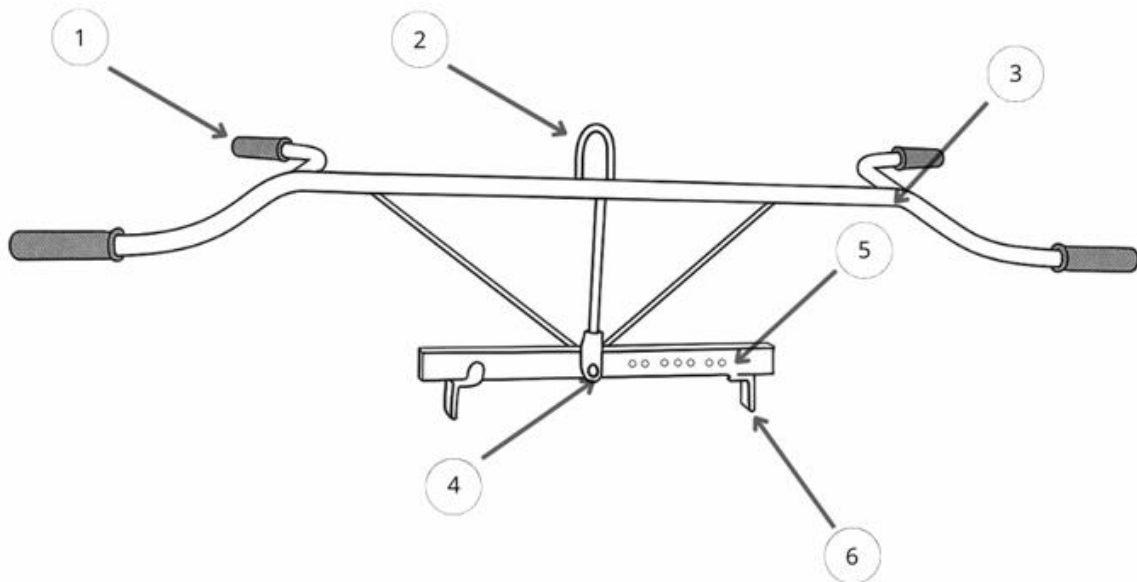

No.	Part Description	Quantity
1	Replaceable rubber grips	4 pcs
2	Suspension hook	1 pc
3	Removable handles	2 pcs
4	Span adjustment mechanism	1 pc
5	Holes for span adjustment	7 pcs
6	Working grip	2 pcs

## **2. Safety instructions**

1. Use the kerbstone handle only on firm, level, and stable ground; never use on soft or uneven surfaces.
2. The weight of the load must never exceed the tool's maximum rated capacity (300 kg).
3. Do not use the handle to lift or transport elements outside the clamping range (560–1100 mm).
4. Before each use, ensure the handle is properly adjusted and securely clamped onto the kerbstone or concrete block.
5. Never place any part of your body under the load during lifting or transport.
6. Perform a visual inspection of the tool before every use. If any damage or deformation is found, remove the handle from service immediately.
7. The central lifting hook is designed for mechanical lifting – use only as intended and do not modify the tool in any way.
8. Always grip the tool by the ergonomic, non-slip handles; do not hold it by any other part.
9. Maintain a safe distance from other people during operation and ensure the load remains stable at all times.
10. Failure to follow these instructions may result in injury to the user or bystanders, or damage to the tool or load.
11. All repairs and maintenance must be carried out only by qualified personnel.

## **3. Use and Operation**

1. Before starting work, set the clamping range to match the size of the kerbstone or block to be lifted.
2. Firmly grip both handles with both hands and carefully clamp the tool onto the load.
3. When lifting manually, keep your back straight and avoid sudden or twisting movements.
4. For mechanical lifting, attach the central hook to the lifting device and ensure the equipment is suitable for the load's weight.
5. Lower the load slowly and in a controlled manner; never allow the load to drop suddenly.
6. After use, clean the tool and store it in a dry place to prevent corrosion.

### **REMEMBER:**

- Quick, uncontrolled movements and overloading the handle are strictly prohibited.
- Using the tool outside its intended purpose may result in serious accidents.

#### **4. Maintenance**

1. Lubricate all moving and sliding parts of the kerbstone handle at regular intervals to ensure smooth operation and prevent wear.
2. Always keep the tool clean and store it in a dry place, protected from moisture and aggressive environmental conditions.
3. Before each use, visually inspect the handle for any signs of damage, deformation, or excessive wear. Remove from service if any defects are found.
4. Check the condition of the non-slip grips and ensure they are securely attached and undamaged.
5. If any parts need replacement, always use original spare parts. When ordering, specify the part number as shown in the technical documentation or exploded view.

#### **IMPORTANT:**

- Do not modify the tool or use non-original components, as this may compromise safety and performance.
- All repairs and maintenance must be performed only by qualified personnel.

#### **VERY IMPORTANT:**

- Never use oils, greases, or chemicals that could damage the galvanized coating or rubber grips.
- Do not use the tool if it is contaminated with substances that could cause corrosion or reduce grip safety.

This maintenance instruction is adapted specifically for the Laying Clamp Pro , based on best practices and the provided reference text.

## **5. Warranty**

LES ("We" or "Us") warrants to the original purchaser only ("You" or "Your") that the LES product purchased will be free from material defects in both materials and workmanship, normal wear and tear excepted, for a period of one year from date of purchase. The foregoing warranty is valid only if the installation and use of the product is strictly in accordance with product instructions. There are no other warranties, express or implied, including the warranty of merchantability or fitness for a particular purpose. If the product does not comply with this limited warranty, Your sole and exclusive remedy is that We will, at our sole option and within a commercially reasonable time, either replace the product or product component without charge to You or refund the purchase price (less shipping). This limited warranty is not transferable.

### **Limitations on the Warranty**

This limited warranty does not cover: (a) normal wear and tear; (b) damage through abuse, neglect, misuse, or as a result of any accident or in any other manner; (c) damage from misapplication, overloading, or improper installation; (d) improper maintenance and repair; and (e) product alteration in any manner by anyone other than Us, with the sole exception of alterations made pursuant to product instructions and in a workmanlike manner.

**NOTE:** Do Not send this unit to the factory for service without obtaining a "Returned Goods Authorization Number" from the service department. We will not be responsible for goods returned without proper authorization.

**MACHINERY (SAFETY) REGULATIONS 2008  
AND SUCCESSIVE MODIFICATIONS  
CONFORMITY DECLARATION**



**WE HEREWITH DECLARE**

THAT THE FOLLOWING MACHINE COMPLIES WITH THE APPROPRIATE BASIC  
SAFETY AND HEALTH REQUIREMENTS OF THE MACHINERY (SAFETY) REGULATIONS 2008  
BASED ON ITS DESIGN AND TYPE, AS BROUGHT INTO CIRCULATION BY US.

IN CASE OF ALTERATION OF THE MACHINE, NOT AGREED UPON BY US, THIS  
DECLARATION WILL LOSE ITS VALIDITY.

MACHINE DESCRIPTION: Laying Clamp Pro

MACHINE TYPE: CL1

APPLICABLE EC DIRECTIVES: MACHINERY (SAFETY) REGULATIONS 2008

APPLICABLE HARMONIZED

STANDARDS: EN 13155:2020  
EN ISO 12100:2010

MANUFACTURER: LIFTING EQUIPMENT STORE

**THE MACHINERY DIRECTIVE 2006/42/EC  
AND SUCCESSIVE MODIFICATIONS  
CONFORMITY DECLARATION**



**WE HEREWITH DECLARE**

THAT THE FOLLOWING MACHINE COMPLIES WITH THE APPROPRIATE BASIC  
SAFETY AND HEALTH REQUIREMENTS OF THE EC DIRECTIVE BASED ON ITS  
DESIGN AND TYPE, AS BROUGHT INTO CIRCULATION BY US.

IN CASE OF ALTERATION OF THE MACHINE, NOT AGREED UPON BY US, THIS  
DECLARATION WILL LOSE ITS VALIDITY.

MACHINE DESCRIPTION: Laying Clamp Pro

MACHINE TYPE: CL1

APPLICABLE EC DIRECTIVES: EC MACHINERY DIRECTIVE: 2006/42/EC

APPLICABLE HARMONIZED

STANDARDS: EN 13155:2020  
EN ISO 12100:2010

MANUFACTURER: LIFTING EQUIPMENT STORE



Distributed by:

**Lifting Equipment Store**

Unit 7 & 17C Gainsborough Trading Estate  
Rufford Road Stourbridge West Midlands DY9 7ND

[www.liftingequipmentstore.com](http://www.liftingequipmentstore.com)