



# **Paver Alignment Bar XE**

## **Owner's Manual**



### **WARNING:**

*Please read carefully and understand these ASSEMBLY AND OPERATION INSTRUCTIONS before operating for the first time. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury and/or affect your warranty.*

**Model – CL6**

**SAVE THESE INSTRUCTIONS FOR REFERENCE**

**Thank you very much for choosing an LES product!**

For future reference, please complete the owner's record below:

Model & Serial Number: \_\_\_\_\_

Purchase Date: \_\_\_\_\_


Save the receipt, warranty, and this manual. It is important that you read the entire manual to become familiar with this product before you begin using it.

This Paver Alignment Bar XE has been designed for certain applications only. LES is not responsible for issues arising from modification or improper use of this product such as an application for which it was not designed. We strongly recommend that this product not be modified and/or used for any application other than that for which it was designed.

For technical questions, please call 01384 567 430.

## 1. Technical Parameters

Parameter	Value
Product No.	10008
Length	1050 mm – ideal for comfortable standing use
Material	Galvanized steel – highly durable and corrosion-resistant
Working Tip	Replaceable profiled blade – designed for easy insertion between tightly placed pavers and replaceable when worn
Purpose	Manual shifting and removal of paving blocks
Tool Type	Hand-operated, professional paving tool
Finish	Corrosion-resistant
Weight	2 kg
Ergonomic Grip	Designed for control, safety, and reduced fatigue
Application	Ideal for block repositioning, correction work, and surface adjustments

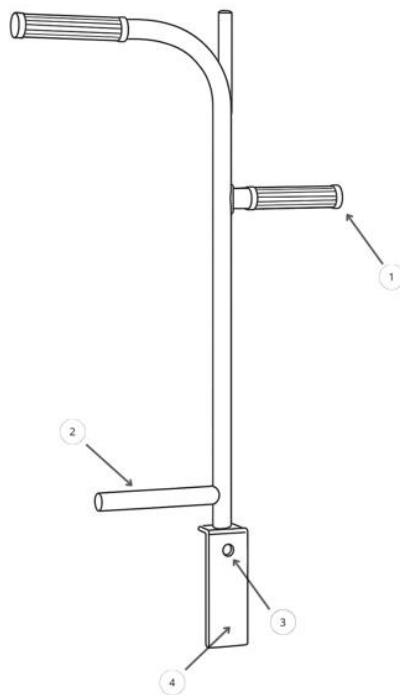

No.	Part Description	Quantity
1	Replaceable rubber grips	2 pcs
2	Auxiliary handle	1 pc
3	Blade fixing screw	1 pc
4	Replaceable blade	1 pc

## **2. Safety instructions**

1. Use the paving block adjuster only on stable, even surfaces.
2. Never use the tool on loose, unstable, or excessively sloped ground.
3. Do not exceed the intended use of the tool.
4. The adjuster is designed exclusively for manual shifting, aligning, and removing paving blocks. Do not use it for prying, lifting heavy objects, or any purpose other than intended.
5. Always inspect the tool before each use.
6. Check for visible damage, deformation, or excessive wear, especially on the replaceable blade. Remove from service if any defects are found.
7. Ensure the blade is securely attached and in good condition.
8. Only use original, undamaged, and correctly mounted blades. Replace worn or damaged blades immediately.
9. Always use the tool with both hands on the grips.
10. Maintain a firm, ergonomic grip to ensure maximum control and safety during operation.
11. Keep hands, feet, and other body parts away from the working end of the tool.
12. Never attempt to adjust or replace the blade while the tool is in use.
13. Do not use excessive force or sudden movements.
14. Apply steady, controlled pressure to avoid loss of balance or damage to the paving blocks.
15. Maintain a safe distance from other people while operating the tool.
16. Ensure the work area is clear of bystanders to prevent accidental injury.
17. Wear appropriate personal protective equipment (PPE):
  18. Safety gloves to protect hands from sharp edges and abrasion
  19. Safety shoes with reinforced toes
  20. Eye protection if there is a risk of flying debris
21. Do not use the tool if it is contaminated with oil, grease, or other substances that may reduce grip safety.
22. Maintenance and repairs must be performed only by qualified personnel.
23. Use only original spare parts and follow the manufacturer's instructions.

## **3. Use and operation**

1. Before use, ensure the tool is clean and the blade is properly mounted.
2. Position the blade between the paving blocks at the desired location.
3. Using both hands, apply controlled leverage to shift, align, or remove the block.
4. After use, clean the tool and store it in a dry place, protected from moisture and corrosion.

### **REMEMBER:**

- Improper use, excessive force, or neglecting safety instructions may result in injury or damage to the tool and paving blocks.

#### **4. Maintenance**

1. Keep the tool clean and dry after each use to prevent corrosion and ensure longevity. Wipe off any dirt, dust, or debris from the galvanized steel surface and the replaceable blade.
2. Regularly inspect the replaceable profiled blade for wear, deformation, or damage. Replace the blade immediately if it shows signs of excessive wear or damage to maintain effective and safe operation.
3. Check the handle grips for any signs of loosening, cracking, or damage. Replace grips if they are worn out to maintain a secure, non-slip hold.
4. Lubricate any moving parts or joints (if applicable) occasionally with a light machine oil to ensure smooth operation and prevent rust.
5. Store the tool in a dry, sheltered place away from moisture and aggressive environmental conditions to avoid corrosion.
6. Do not use harsh chemicals or abrasive materials for cleaning, as these may damage the galvanized coating or the blade.
7. Use only original replacement blades and parts recommended by the manufacturer to ensure compatibility and safety.
8. If any repairs are necessary, they should be performed only by qualified personnel familiar with the tool's construction and safety requirements.
9. This maintenance routine will help ensure the Paver Alignment Bar XE remains safe, reliable, and effective throughout its service life.

#### **IMPORTANT:**

- Do not modify the tool or use non-original parts, as this may compromise functionality and safety.
- All servicing and repairs must be performed only by qualified personnel.

#### **VERY IMPORTANT:**

- Never apply oils, greases, or substances that may damage the galvanized coating or rubber grips.
- Do not use the tool if it is contaminated with corrosive materials or substances that could affect grip or mechanical safety.

## **5. Warranty**

LES ("We" or "Us") warrants to the original purchaser only ("You" or "Your") that the LES product purchased will be free from material defects in both materials and workmanship, normal wear and tear excepted, for a period of one year from date of purchase. The foregoing warranty is valid only if the installation and use of the product is strictly in accordance with product instructions. There are no other warranties, express or implied, including the warranty of merchantability or fitness for a particular purpose. If the product does not comply with this limited warranty, Your sole and exclusive remedy is that We will, at our sole option and within a commercially reasonable time, either replace the product or product component without charge to You or refund the purchase price (less shipping). This limited warranty is not transferable.

### **Limitations on the Warranty**

This limited warranty does not cover: (a) normal wear and tear; (b) damage through abuse, neglect, misuse, or as a result of any accident or in any other manner; (c) damage from misapplication, overloading, or improper installation; (d) improper maintenance and repair; and (e) product alteration in any manner by anyone other than Us, with the sole exception of alterations made pursuant to product instructions and in a workmanlike manner.

**NOTE:** Do Not send this unit to the factory for service without obtaining a "Returned Goods Authorization Number" from the service department. We will not be responsible for goods returned without proper authorization.

**MACHINERY (SAFETY) REGULATIONS 2008  
AND SUCCESSIVE MODIFICATIONS  
CONFORMITY DECLARATION**



**WE HEREWITH DECLARE**

THAT THE FOLLOWING MACHINE COMPLIES WITH THE APPROPRIATE BASIC  
SAFETY AND HEALTH REQUIREMENTS OF THE MACHINERY (SAFETY) REGULATIONS 2008  
BASED ON ITS DESIGN AND TYPE, AS BROUGHT INTO CIRCULATION BY US.

IN CASE OF ALTERATION OF THE MACHINE, NOT AGREED UPON BY US, THIS  
DECLARATION WILL LOSE ITS VALIDITY.

MACHINE DESCRIPTION: Paver Alignment Bar XE

MACHINE TYPE: CL6

APPLICABLE EC DIRECTIVES: MACHINERY (SAFETY) REGULATIONS 2008

APPLICABLE HARMONIZED  
STANDARDS: EN ISO 12100:2010

MANUFACTURER: LIFTING EQUIPMENT STORE

**THE MACHINERY DIRECTIVE 2006/42/EC  
AND SUCCESSIVE MODIFICATIONS  
CONFORMITY DECLARATION**



**WE HEREWITH DECLARE**

THAT THE FOLLOWING MACHINE COMPLIES WITH THE APPROPRIATE BASIC  
SAFETY AND HEALTH REQUIREMENTS OF THE EC DIRECTIVE BASED ON ITS  
DESIGN AND TYPE, AS BROUGHT INTO CIRCULATION BY US.

IN CASE OF ALTERATION OF THE MACHINE, NOT AGREED UPON BY US, THIS  
DECLARATION WILL LOSE ITS VALIDITY.

MACHINE DESCRIPTION: Paver Alignment Bar XE

MACHINE TYPE: CL6

APPLICABLE EC DIRECTIVES: EC MACHINERY DIRECTIVE: 2006/42/EC

APPLICABLE HARMONIZED  
STANDARDS: EN ISO 12100:2010

MANUFACTURER: LIFTING EQUIPMENT STORE





Distributed by:

**Lifting Equipment Store**

Unit 7 & 17C Gainsborough Trading Estate  
Rufford Road Stourbridge West Midlands DY9 7ND

[www.liftingequipmentstore.com](http://www.liftingequipmentstore.com)